


## CONTROL LOCATIONS

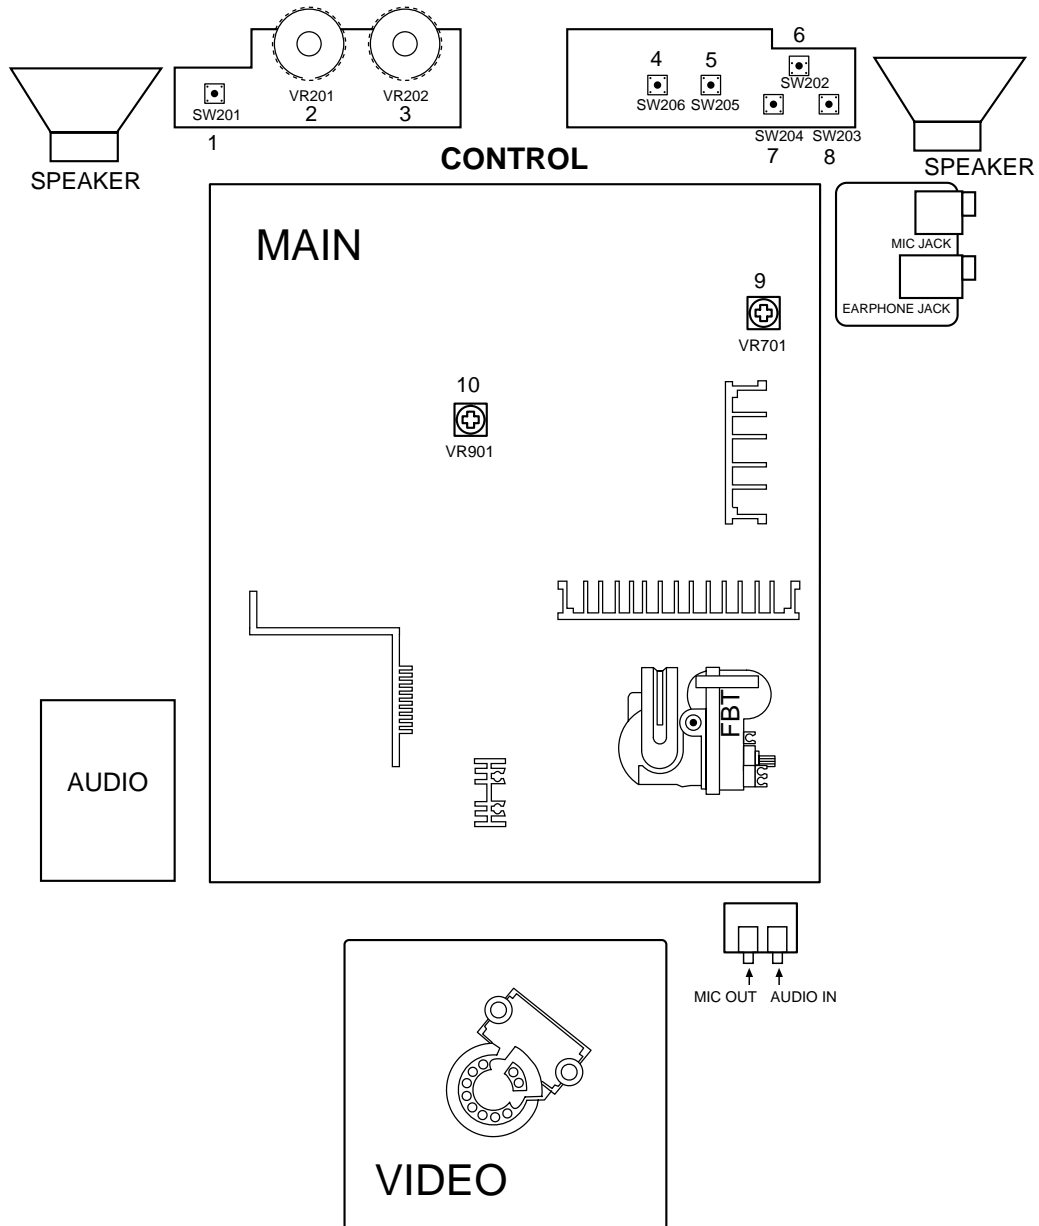

No.	Ref. No.	Control Function	No.	Ref. No.	Control Function
1	SW201	POWER SWITCH	6	SW202	ENTER BUTTON
2	VR201	CONTRAST CONTROL	7	SW204	OSD SELECT RIGHT
3	VR202	BRIGHTNESS CONTROL	8	SW203	OSD SELECT LEFT
4	SW206	SOUND MUTE	9	VR701	H/V ADJUSTMENT
5	SW205	SOUND	10	VR901	B <sup>+</sup> ADJUSTMENT