


DISASSEMBLY


1. TILT/SWIVEL REMOVAL

- 1) Set the monitor face down.
- 2) Pressing the latch (a), carefully remove the Tilt/Swivel by pulling it upward.

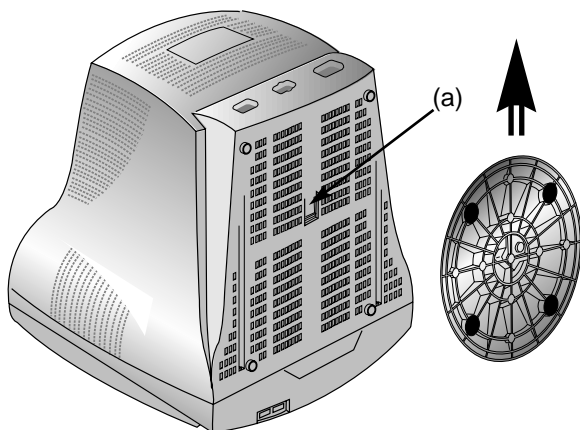


3. TOTAL CHASSIS ASSEMBLY REMOVAL

- 1) Disconnect P901 (Degaussing pin), P701 (H-DY pin), and P601 (V-DY pin).
- 2) Remove two screws (a) from the Main Bracket to separate it from the Front Cabinet.

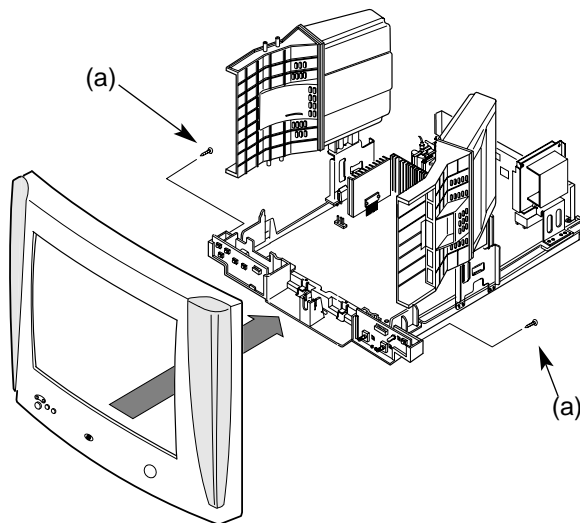


2. BACK COVER REMOVAL

- 1) Remove four screws (a) from the Back Cover.
- 2) Slide the Back Cover away from the Front Cabinet of the monitor.

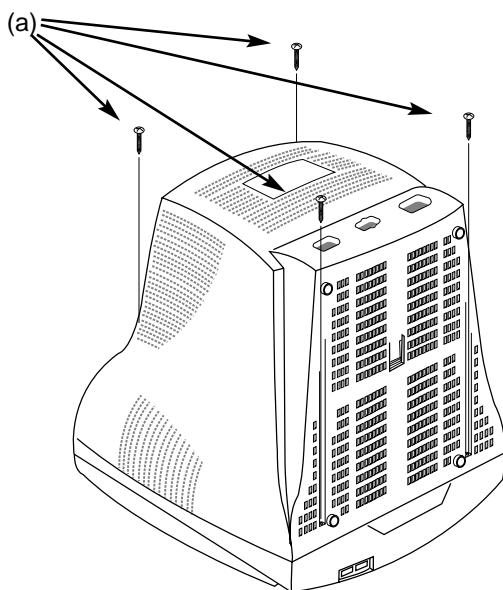


4. CRT BOARD ASSEMBLY REMOVAL

- 1) Remove three pins (a).
- 2) Remove the CRT ground connector (b).
- 3) Carefully separate the CRT Board Assembly from the CRT neck.
- 4) Discharge the remaining static electricity by shorting between the Anode Cap and the CRT ground.
- 5) Disconnect the Anode Cap from the CRT.

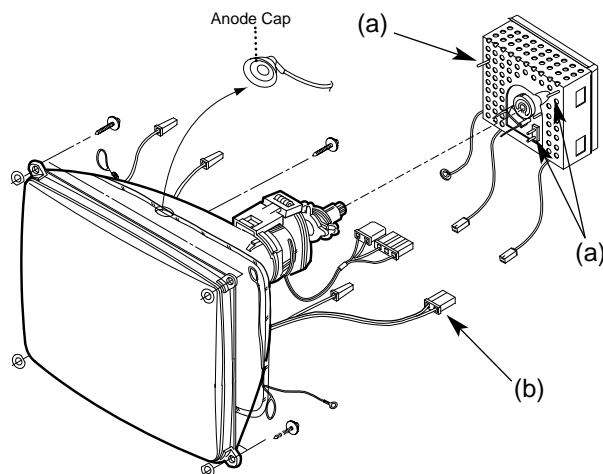

5. BOTTOM BRACKET REMOVAL

- 1) Remove eight screws (a).
- 2) Remove the Bottom Bracket.

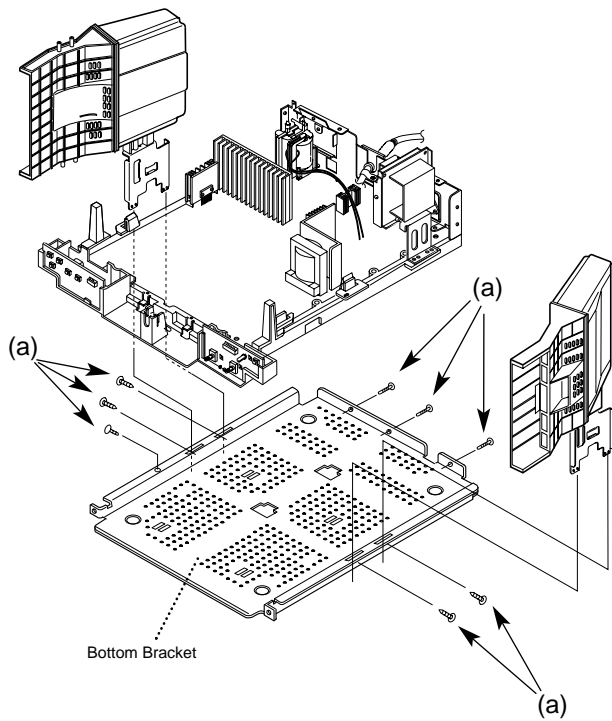

6. MAIN BOARD ASSEMBLY REMOVAL

- 1) Remove ten screws (a).
- 2) Remove three screws (b).
- 3) Release two latches (c) from the Main Board Assembly.

