



TROUBLESHOOTING GUIDE


1. NO POWER

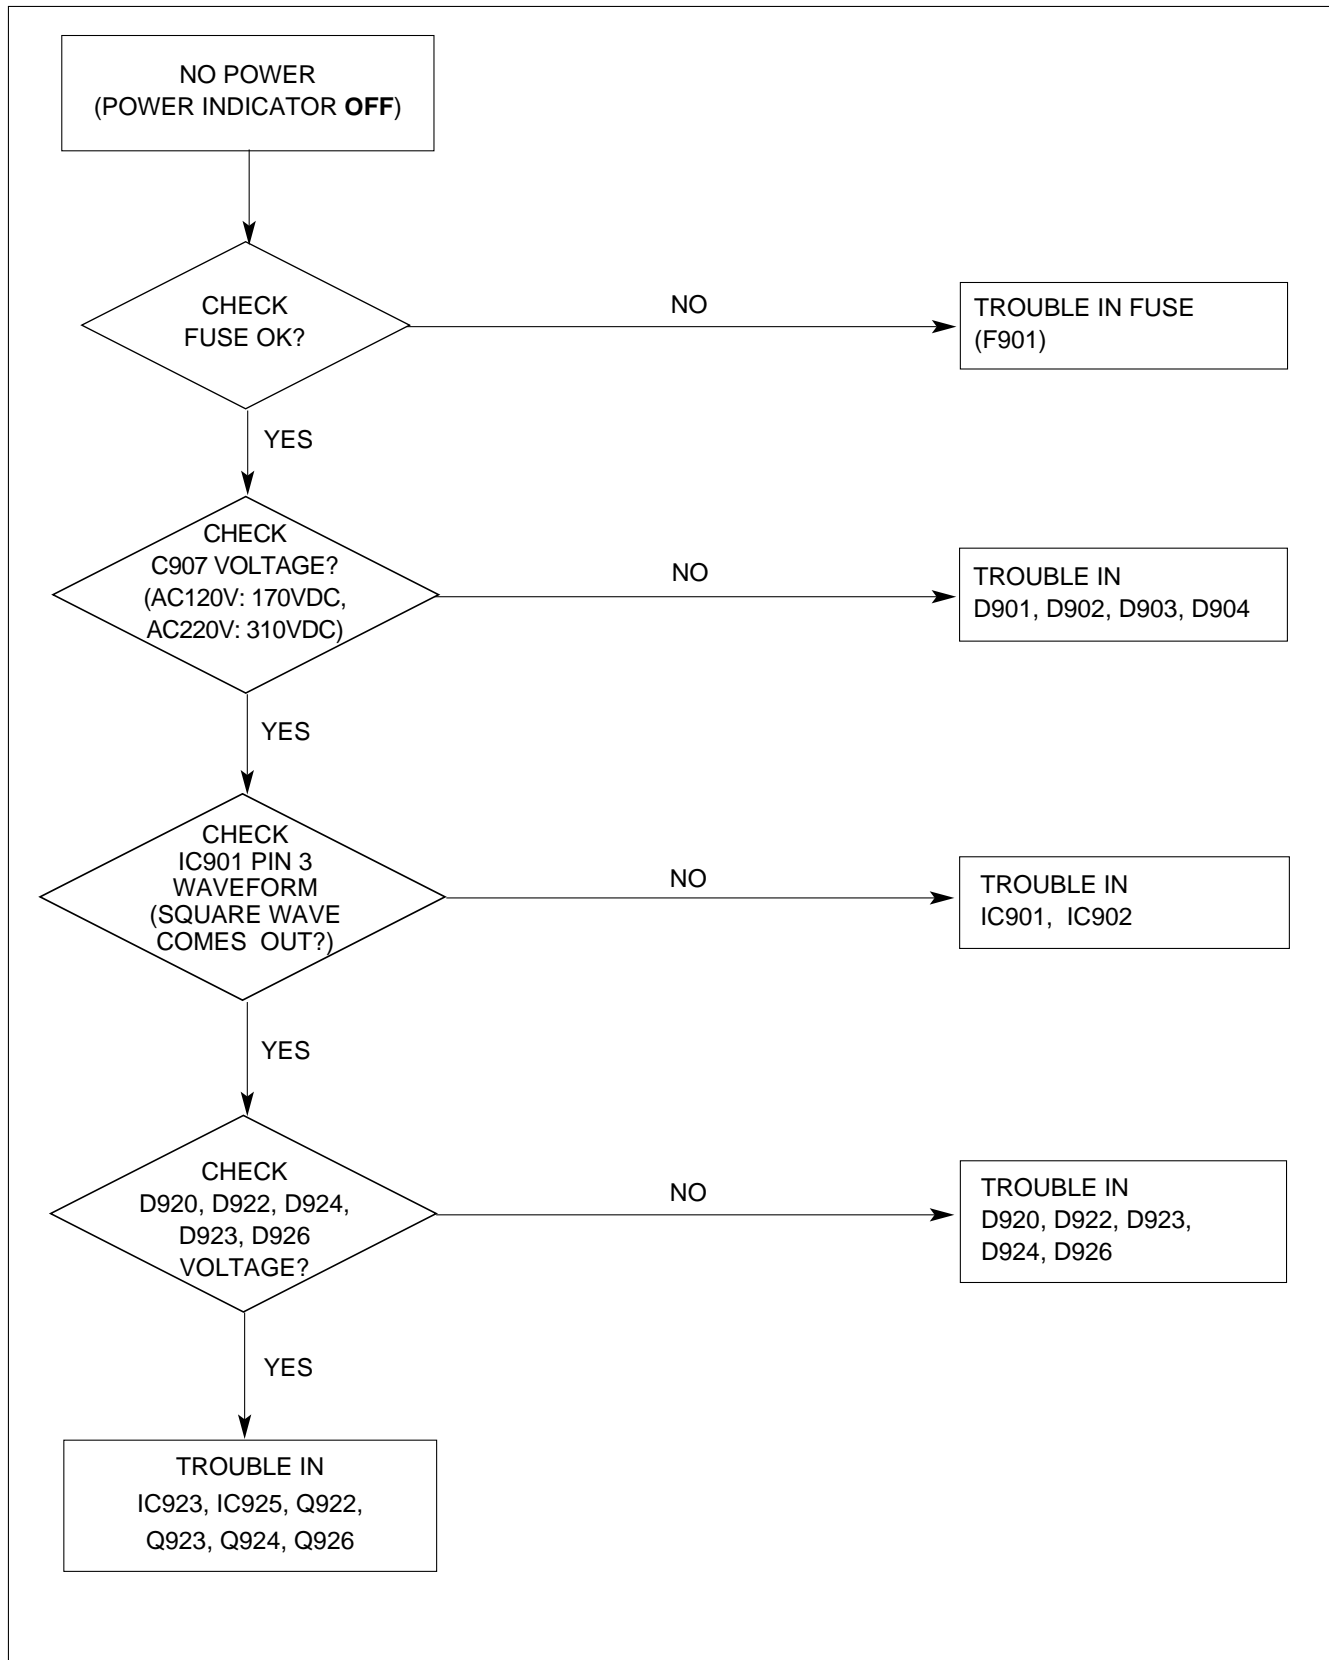


2. NO CHARACTER

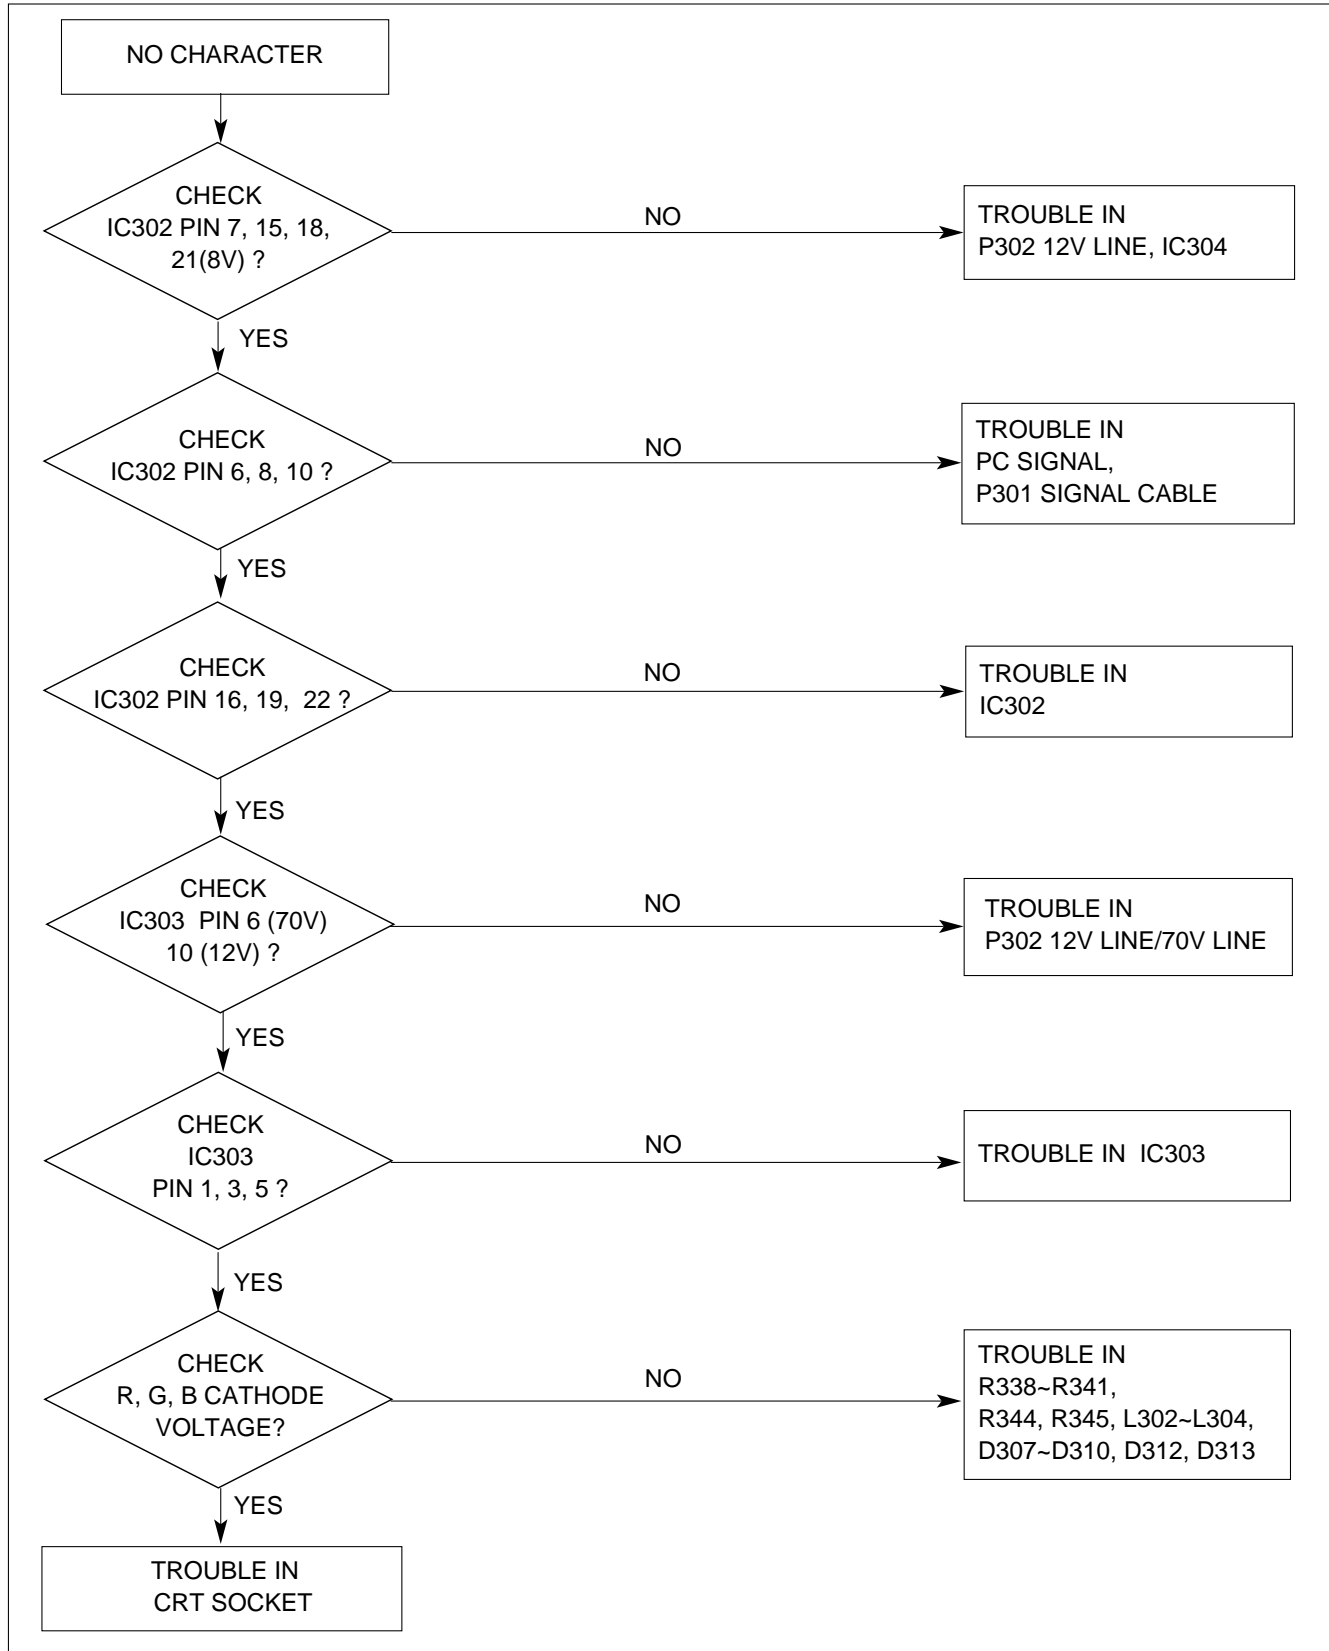


3. NO RASTER

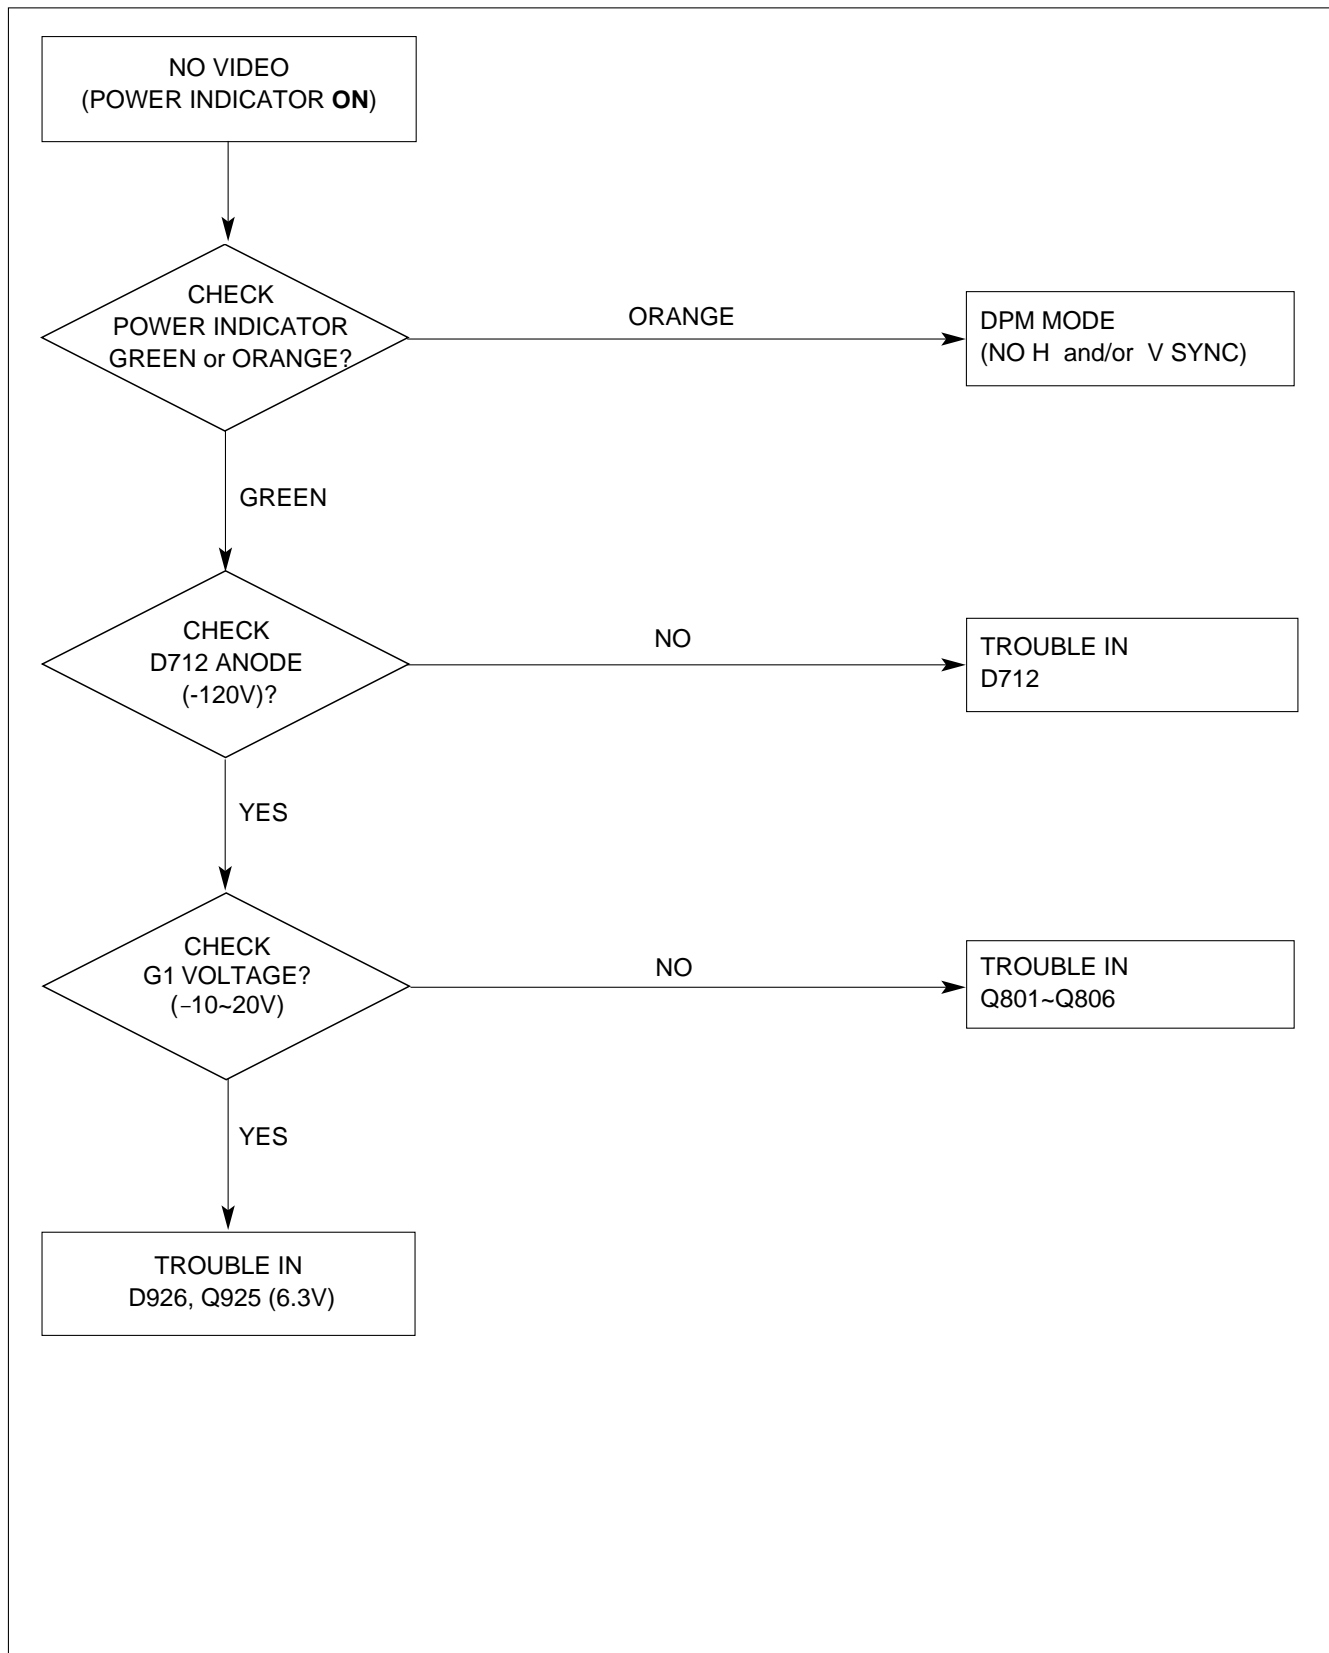

4. NO HORIZONTAL DEFLECTION

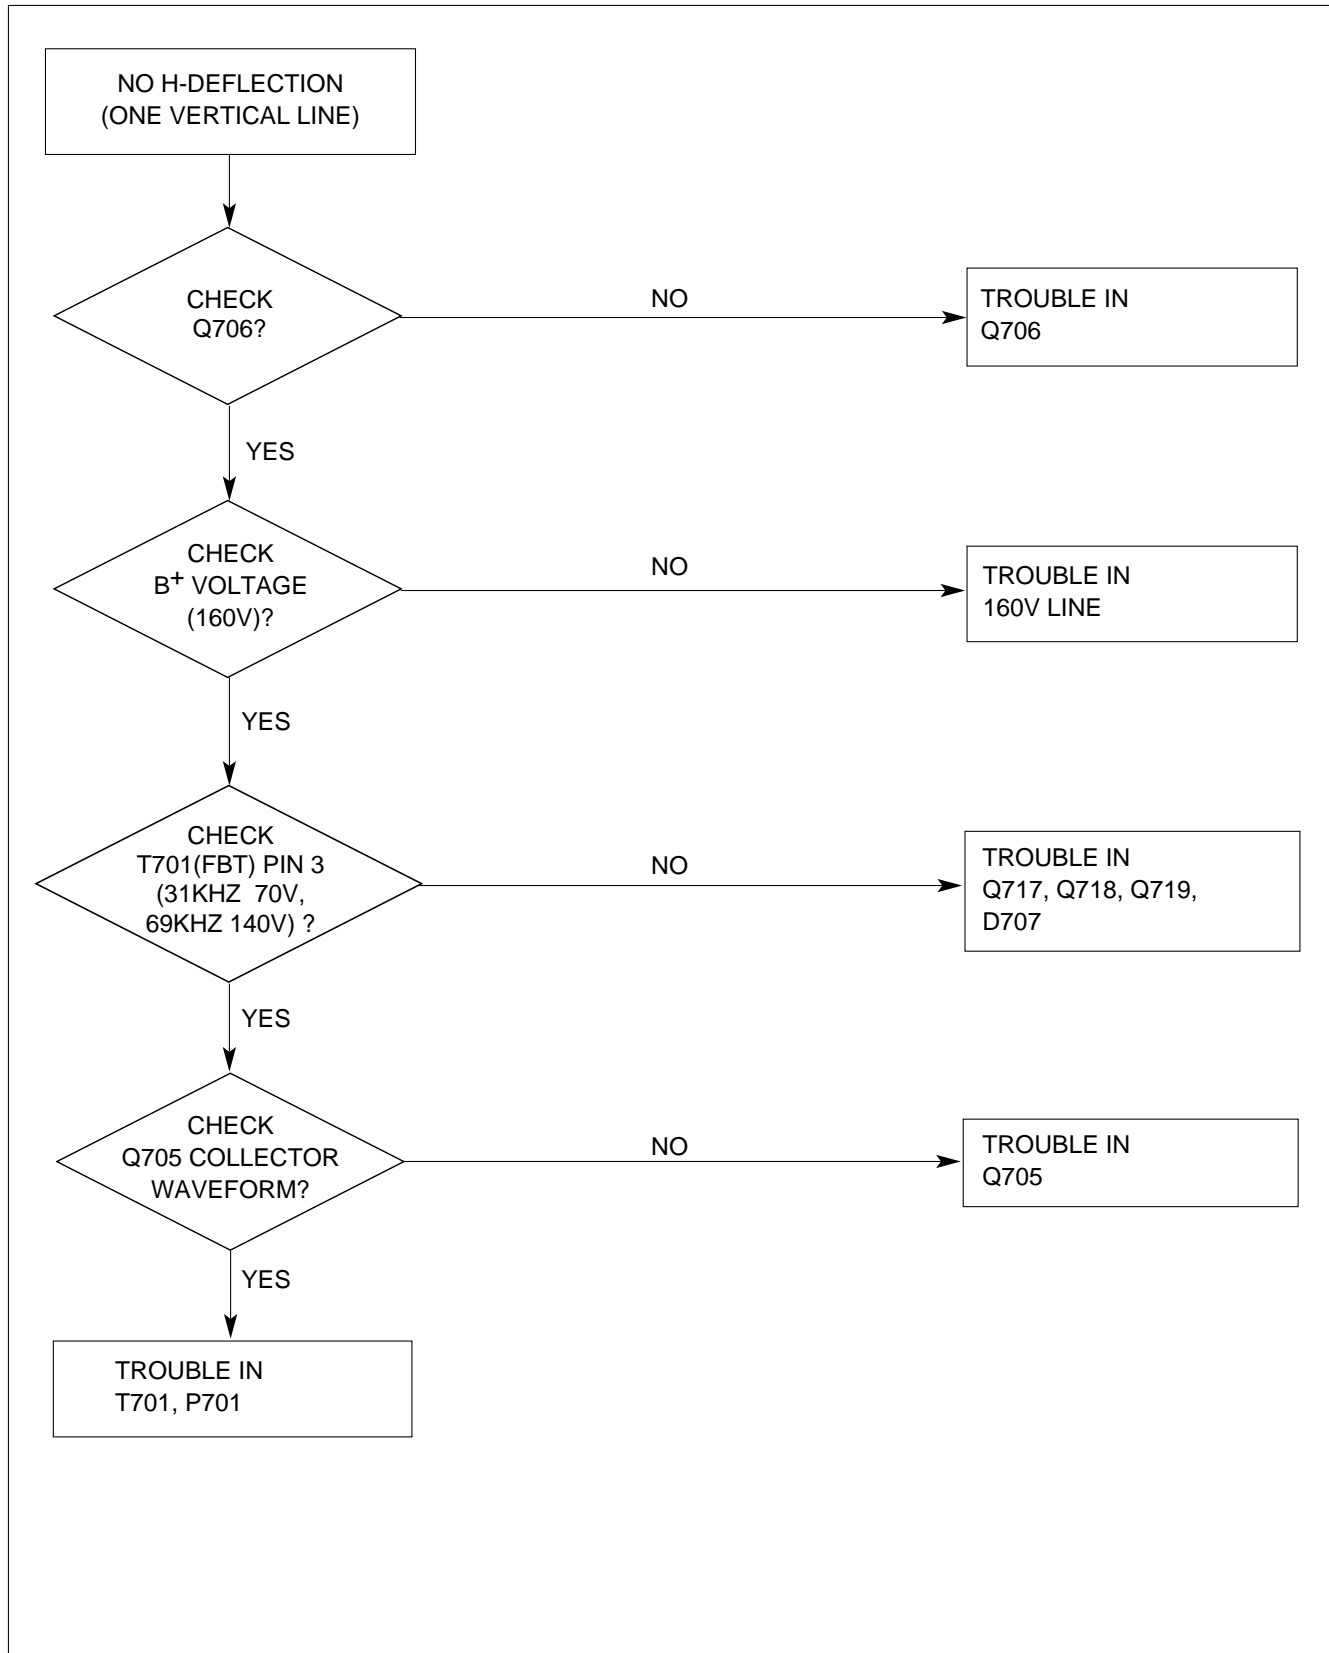


5. TROUBLE IN H-LINEARITY

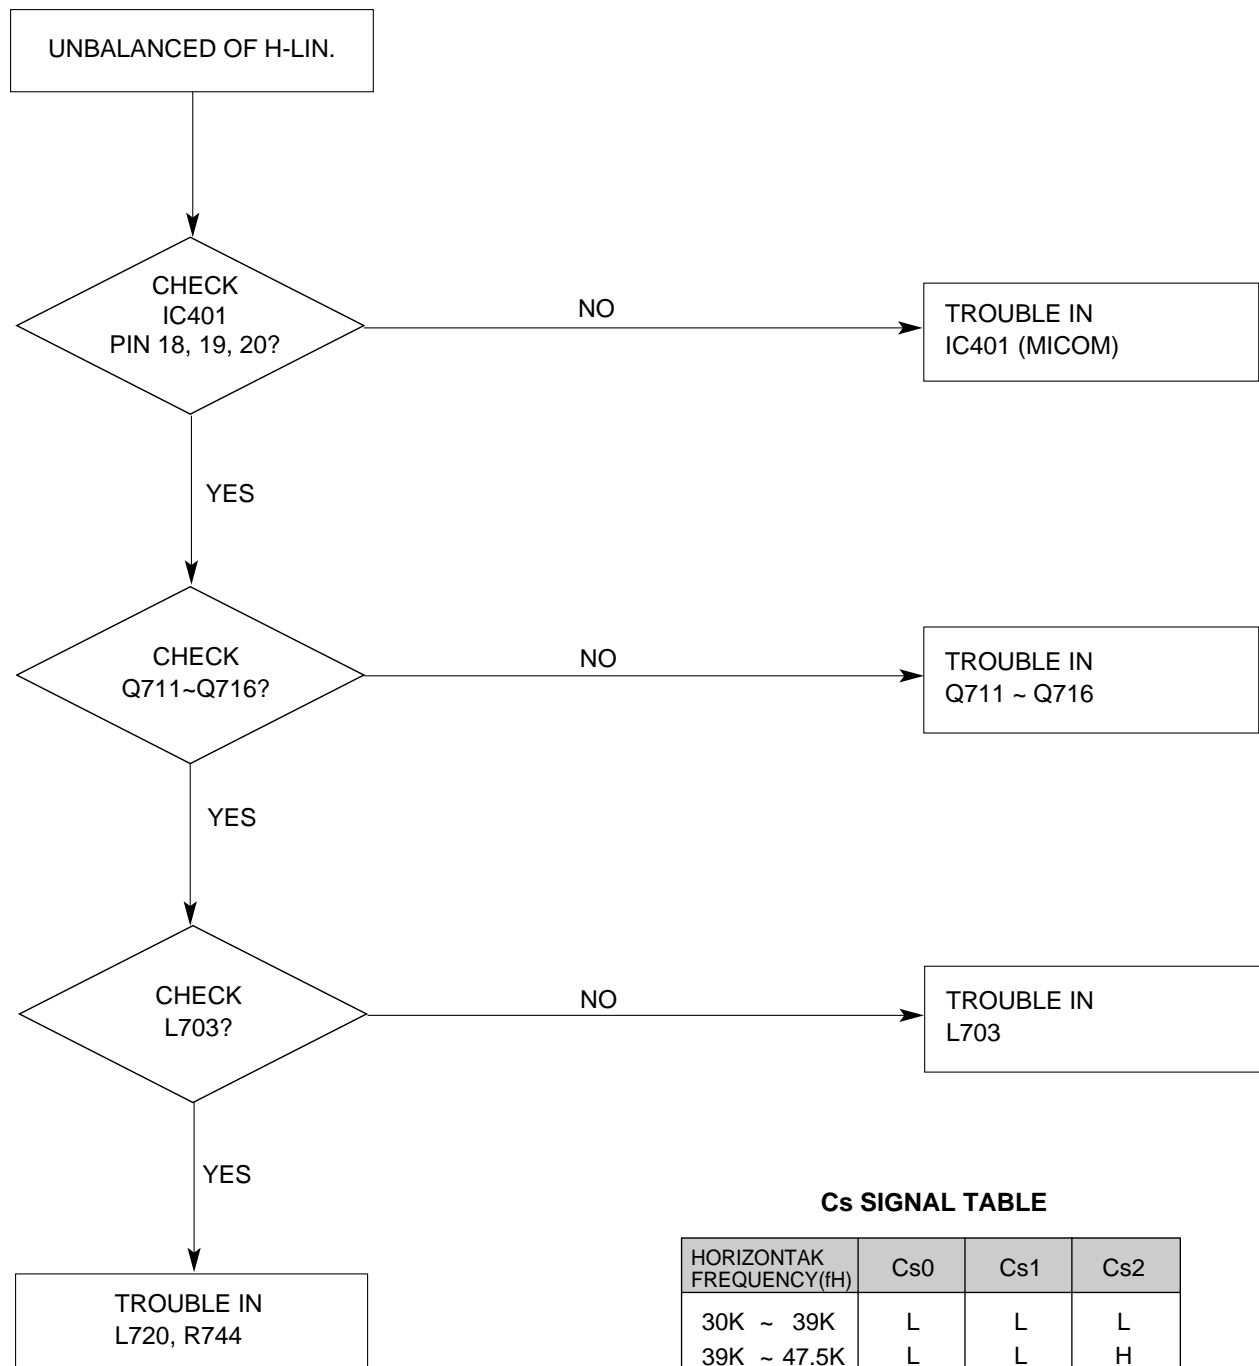


Cs SIGNAL TABLE

HORIZONTAL FREQUENCY(fH)	Cs0	Cs1	Cs2
30K ~ 39K	L	L	L
39K ~ 47.5K	L	L	H
47.5K ~ 62K	L	H	H
62K ~ 70K	H	H	H


6. NO VERTICAL DEFLECTION

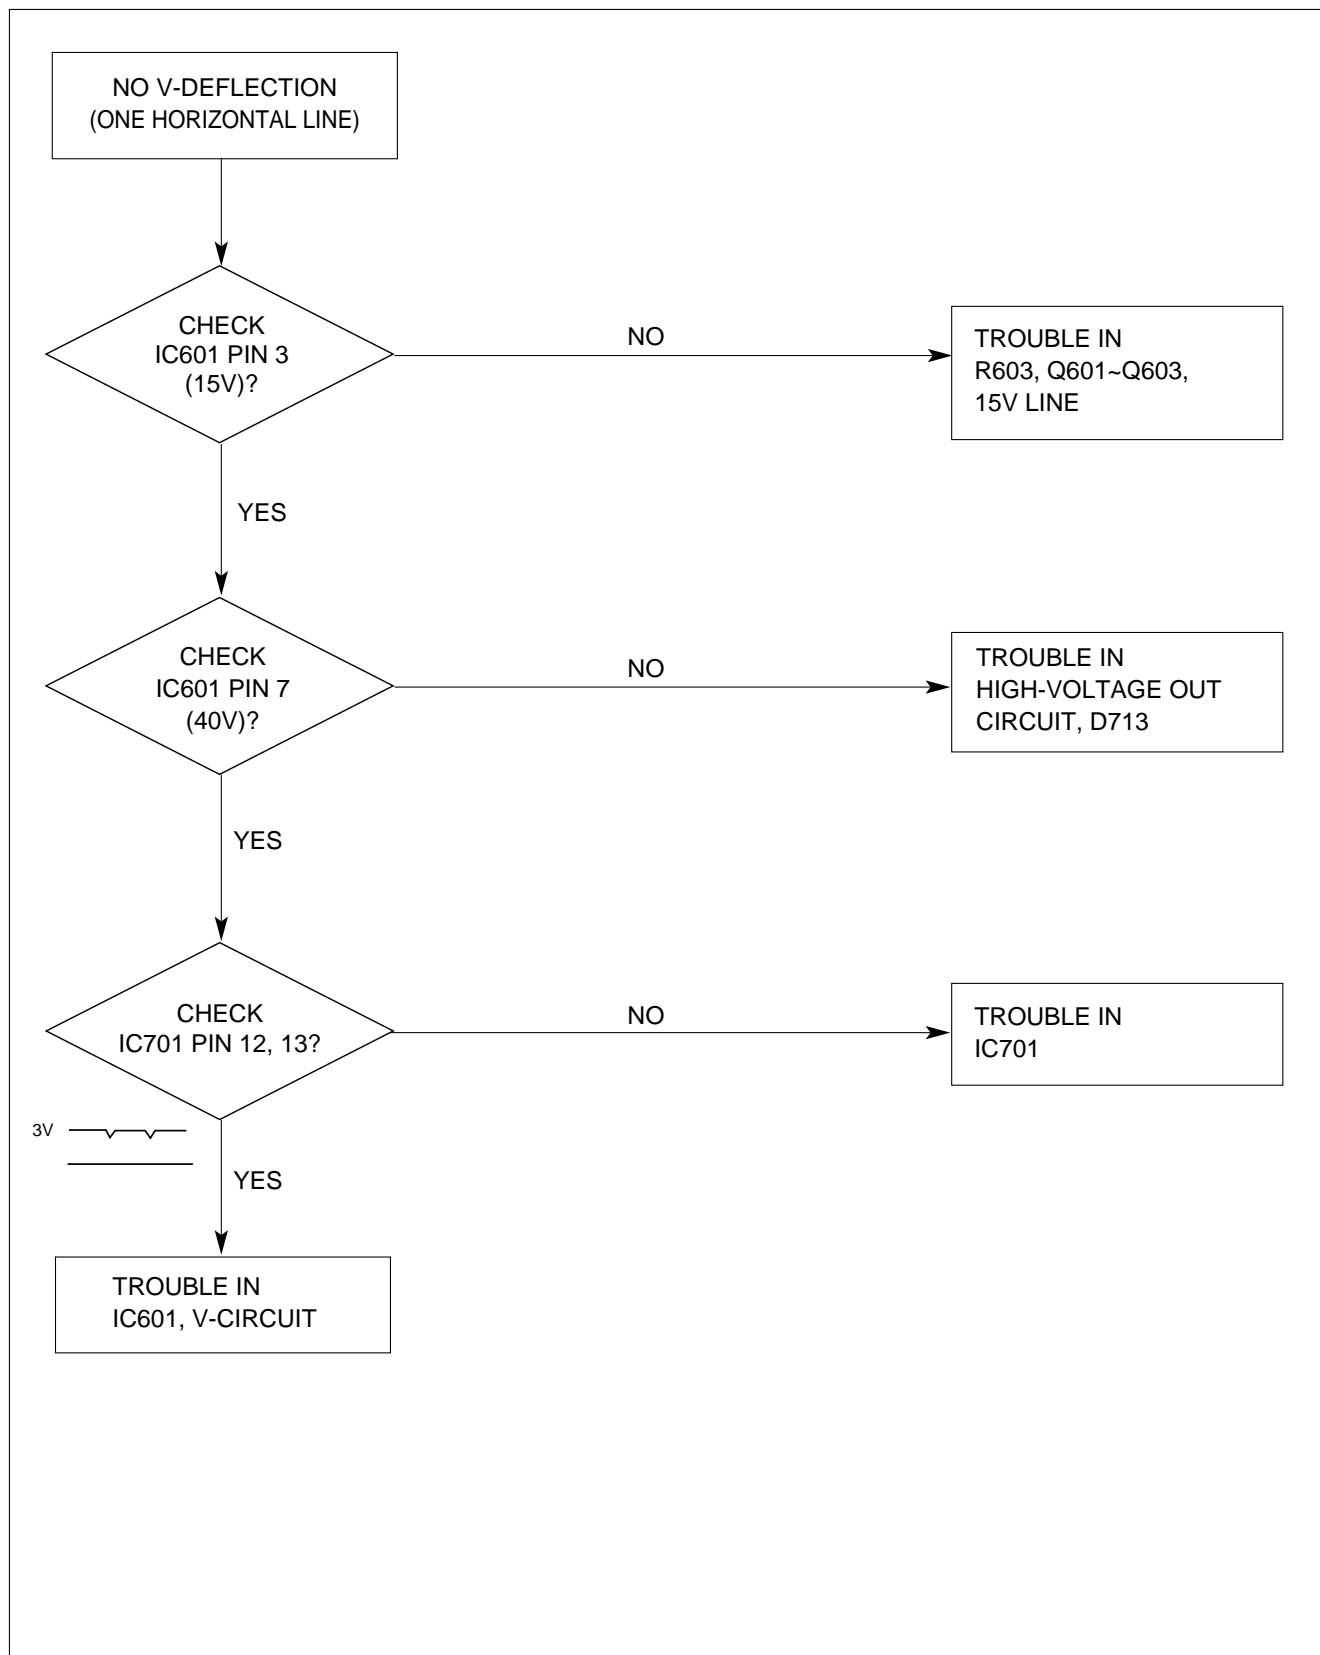

7. TROUBLE IN OSD

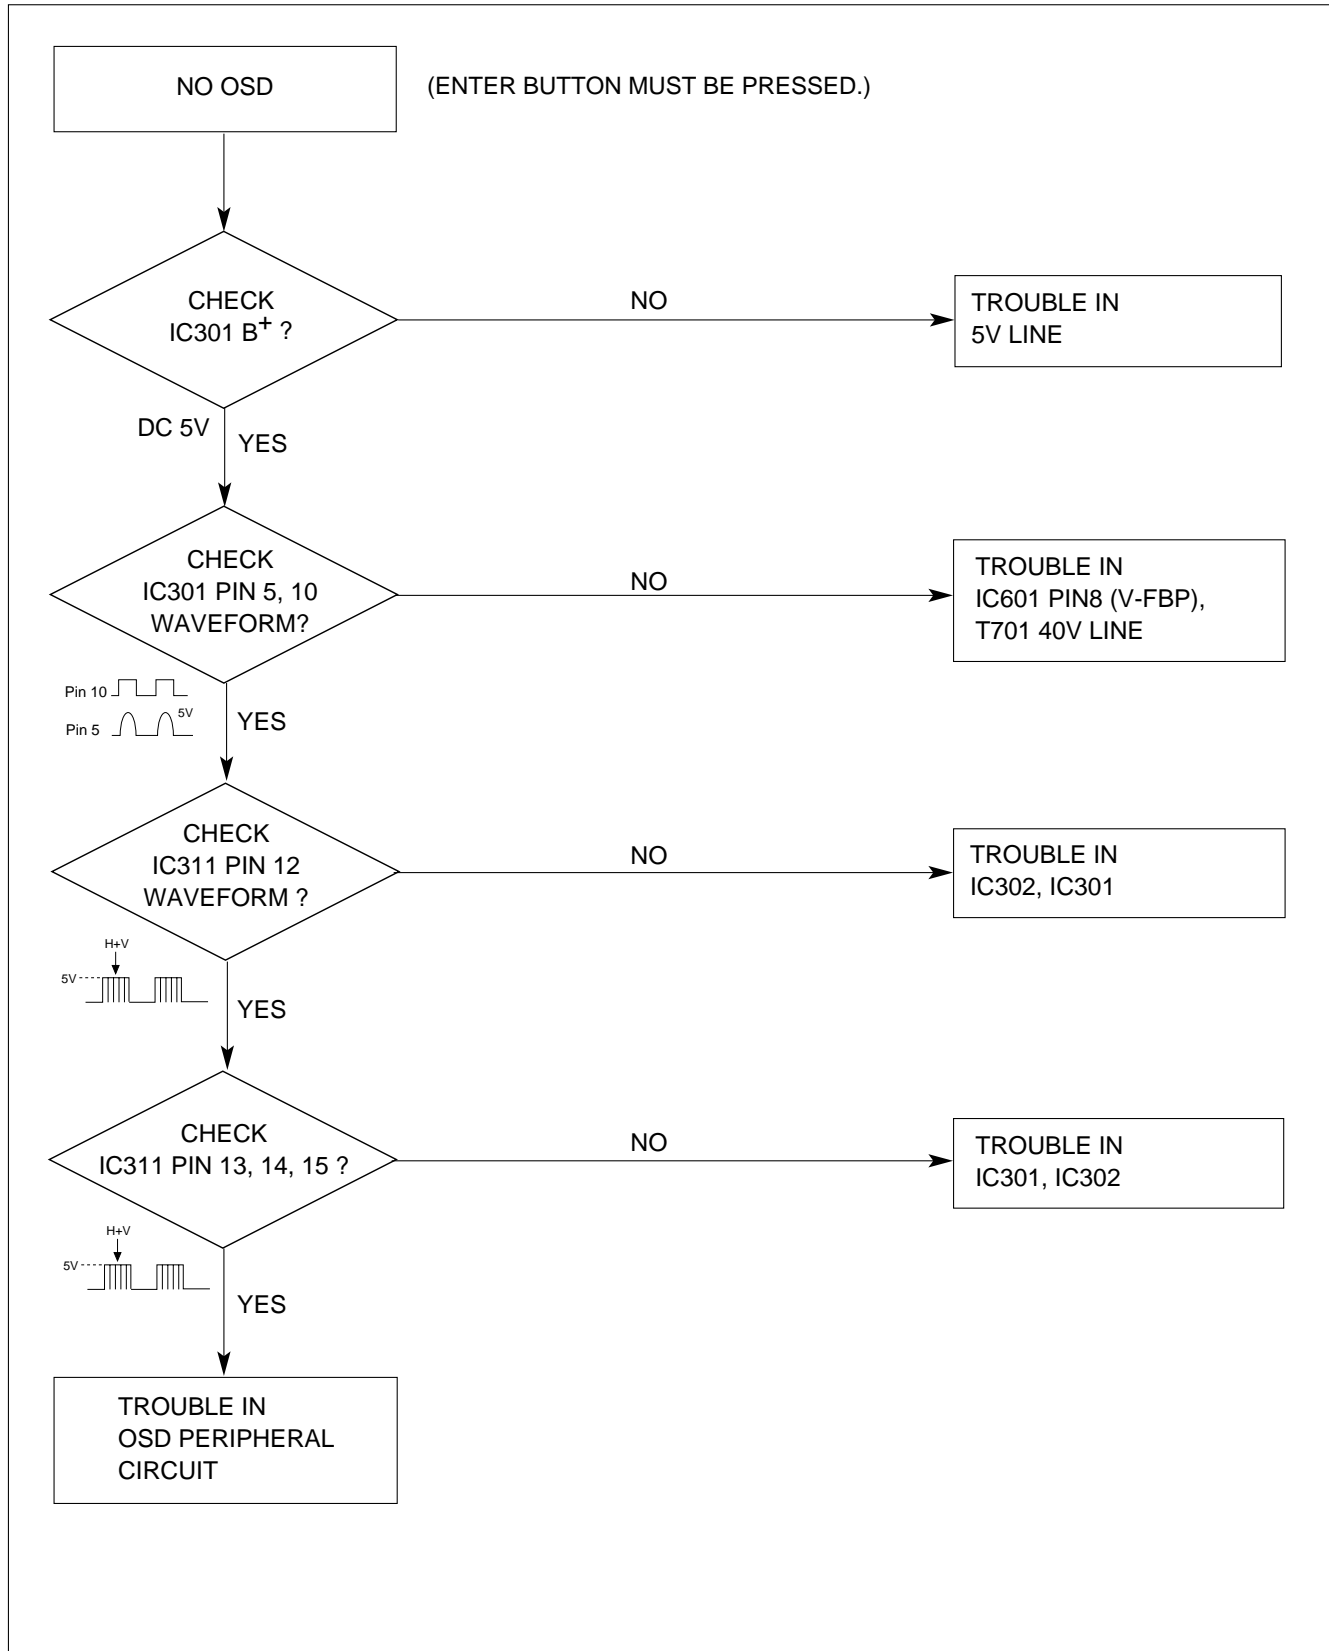


8. TROUBLE IN DPM

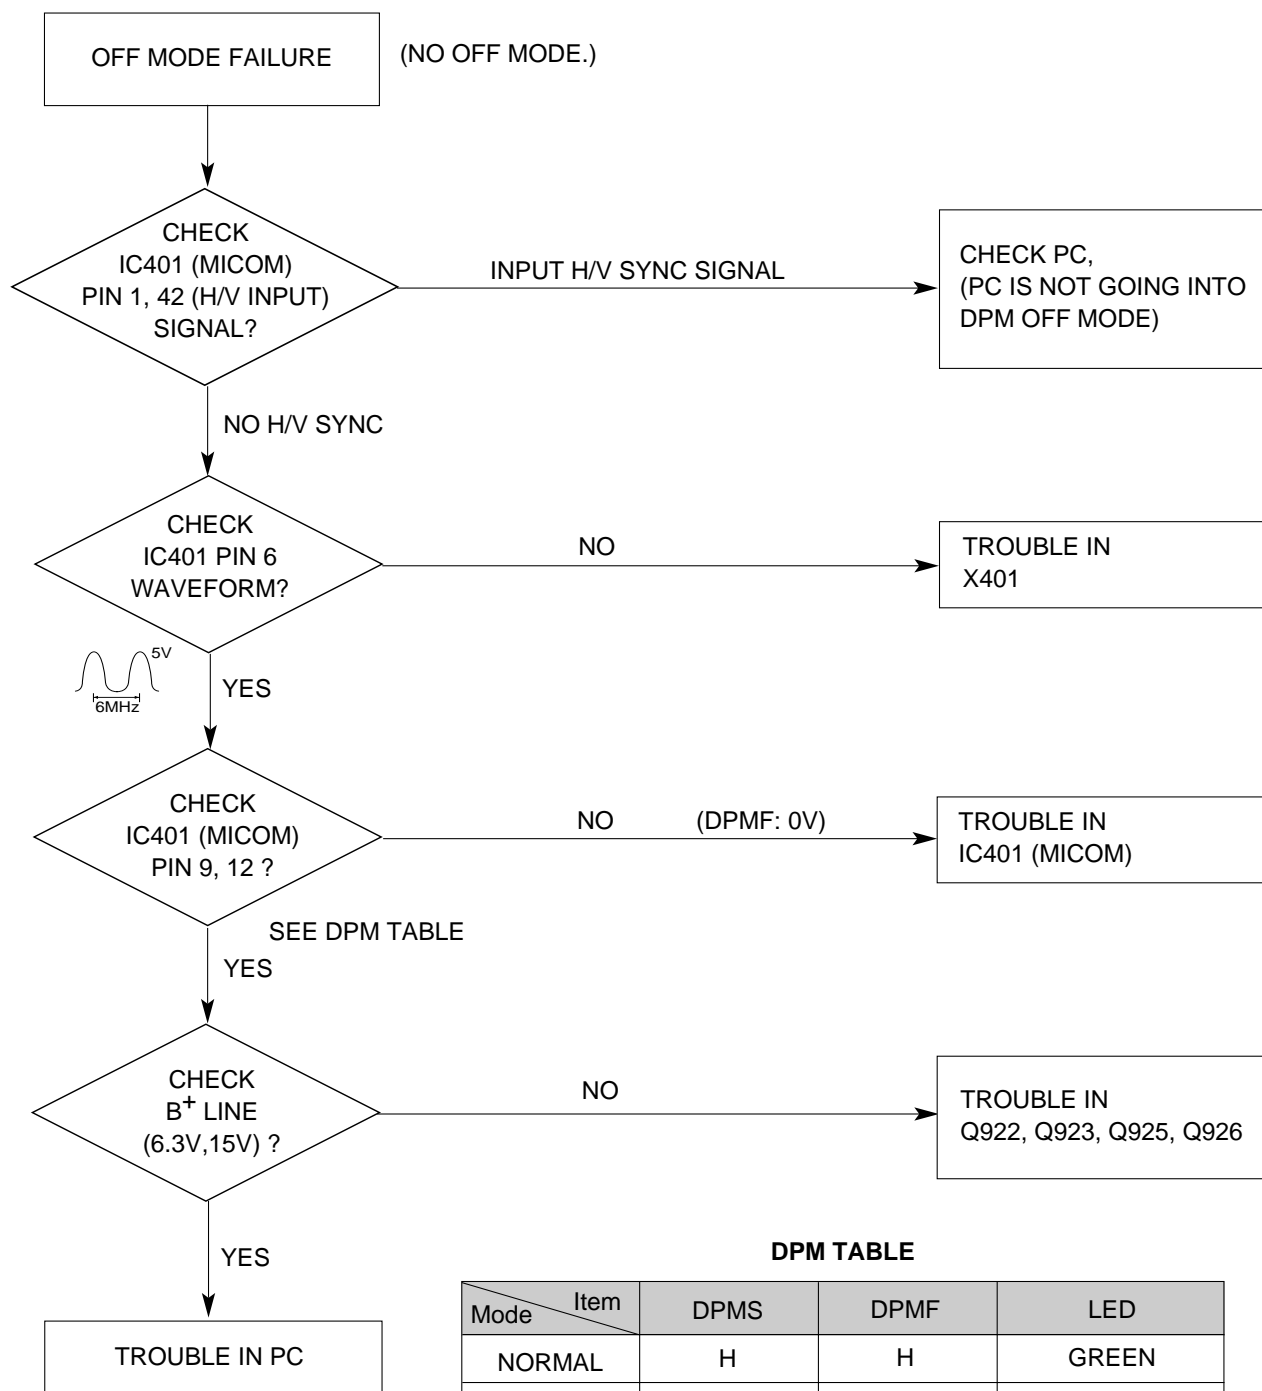


DPM TABLE

Mode \ Item	DPMS	DPMF	LED
NORMAL	H	H	GREEN
STAND-BY	H	L	ORANGE
SUSPEND	H	L	ORANGE
OFF	L	L	ORANGE

9. NO DEGAUSSING

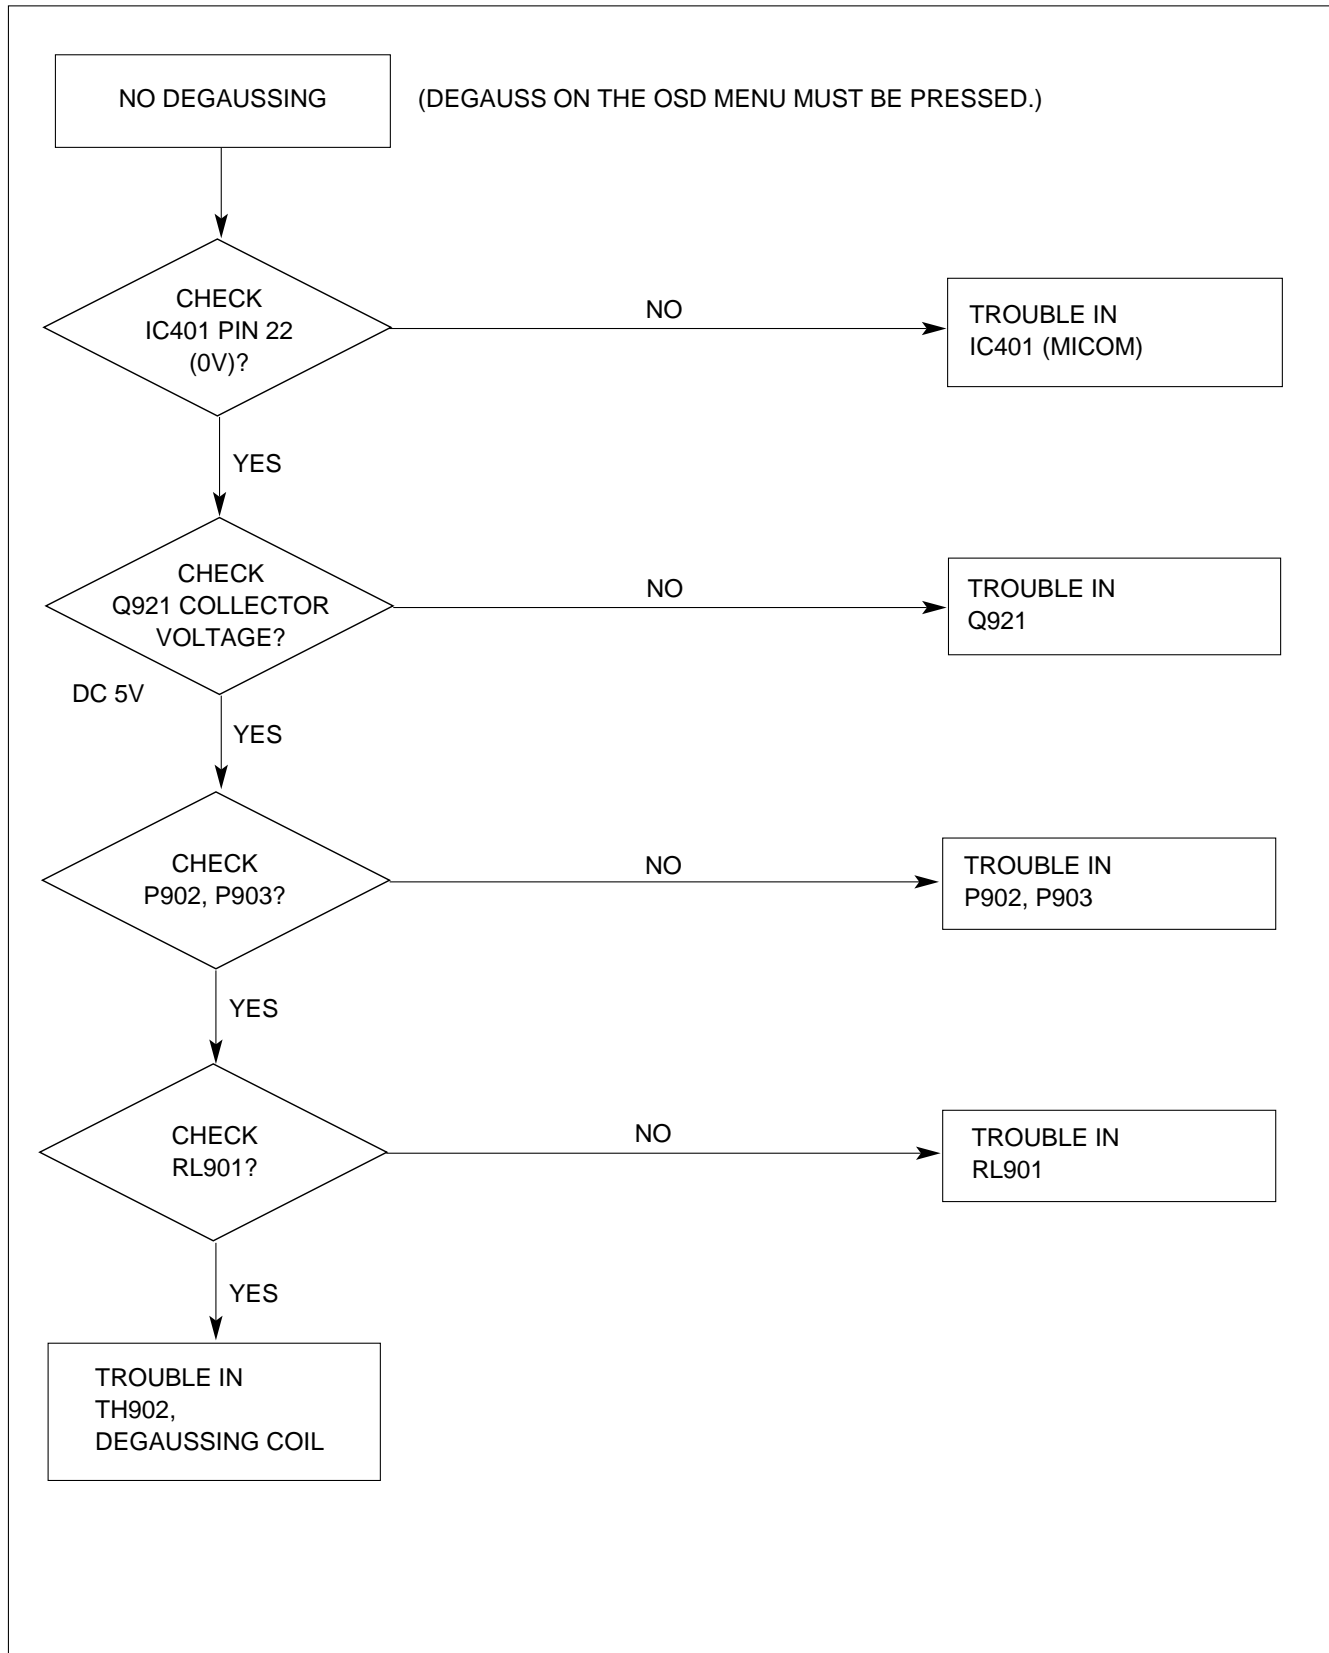

10. NO TILT (NO ROTATION)

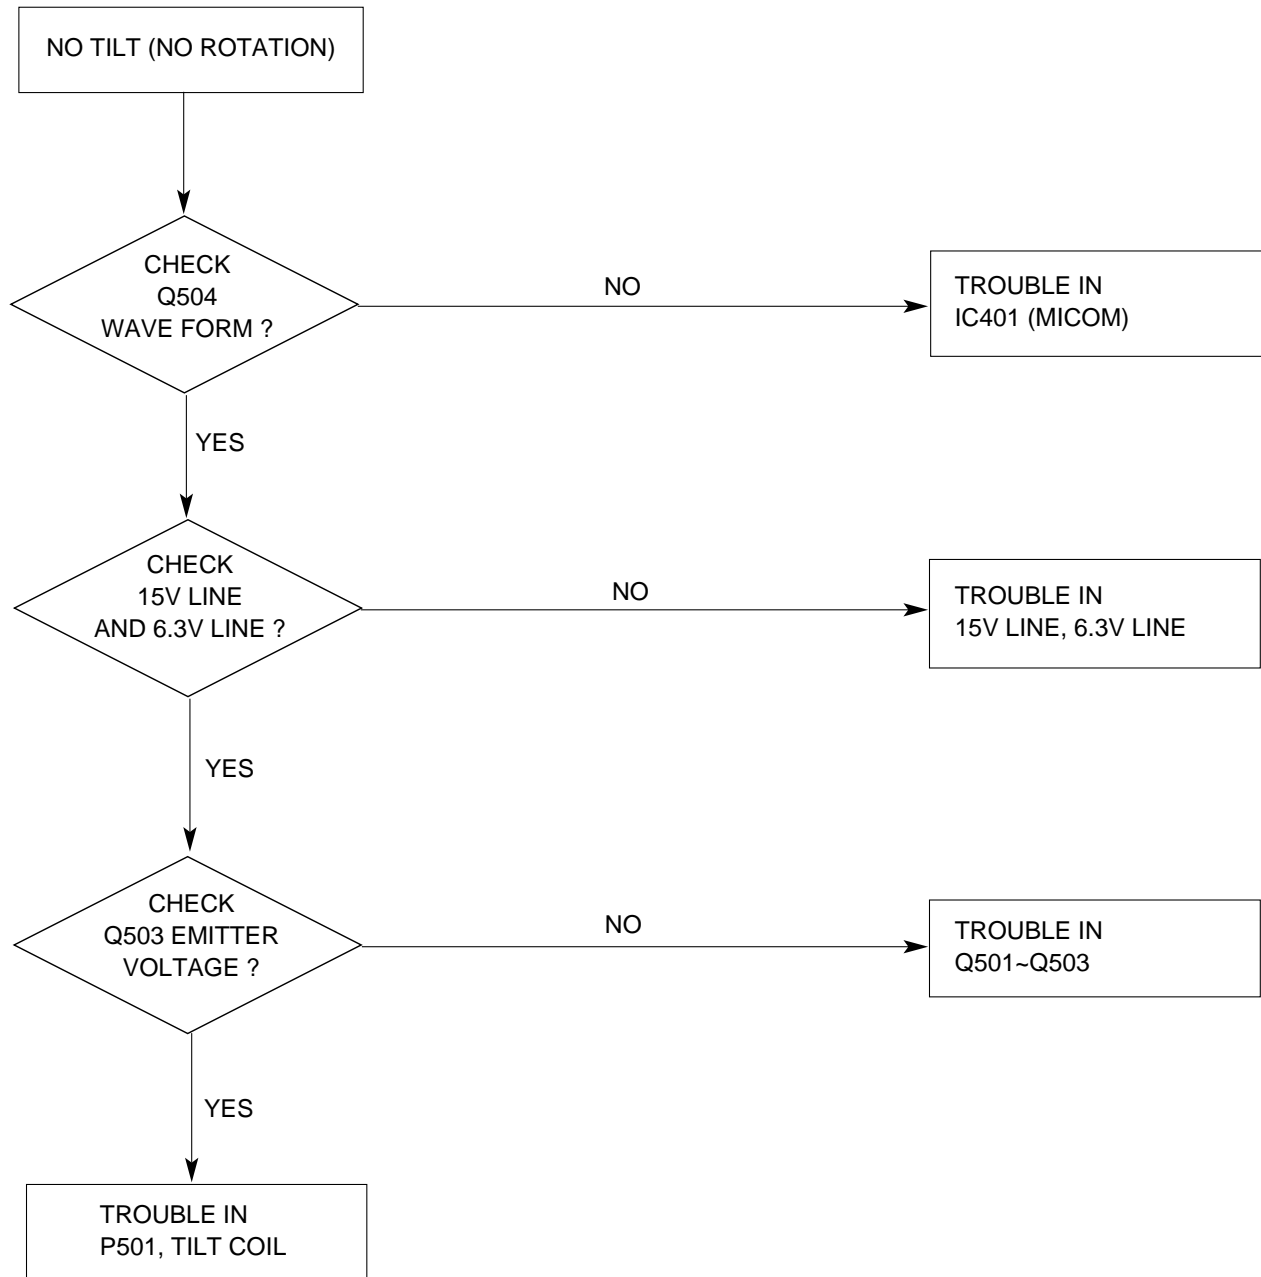

11. TROUBLE IN AUDIO

